

EDIFIER

MP19

Portable Speaker

User manual | Manuel d'utilisateur

Important safety instruction

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- Keep these instructions.
- Follow all instructions.
- Do not use this apparatus under water.
- Clean only with dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled on objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.


Note: There is a built-in rechargeable lithium-ion battery in the speaker. Danger of explosion if disassemble the speaker. The speaker shall not be placed close to excessive heat such as fire or the like.

Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


Unpack the box

Box Contents:

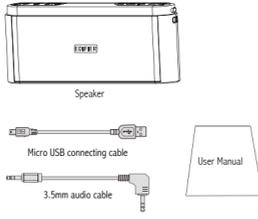

Speaker
Micro USB connecting cable
3.5mm audio cable
User Manual

Charge Instructions

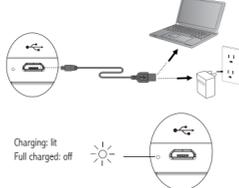

Charging: lit
Full charged: off


- Connect the speaker to USB power source on a computer or USB AC adapter with the attached USB cable for charging.
- Charge speaker for approximately 6–8 hours before first usage.
- Please close the speaker when in unused.

Note:
To ensure a full charge and for optimal audio playback, please fully charge the EDIFIER MP19 once a month.

Illustrations



- Numeric keys (0–9): Store/select FM presets (FM mode); Play the selected music (SD mode)
- Audio source selection: FM—AUX—SD—USB
- Play/pause/press and hold to display the battery level
- Volume adjustment
- Single cycle (micro SD card mode)
- Previous/next track/folder (micro SD card mode)



- Power switch
- Carrying strap hole
- Charging indicator
- Micro USB connector port
- Headphone jack
- AUX input port
- Micro SD card connector port

Operational guide

FM mode

Turn to FM radio :	Press the [FM] key
Auto search & preset radio stations:	Press & hold [FM] key
Change preset stations:	press [0]/[10]
Manually setup radio stations:	For example, to store FM102.3 to preset No. 45) Press & hold [0]/[10] to enter TUNE mode Press [0]/[10] to tune into 102.3. Press number 4, then press & hold number 5 until the number blink to complete the setting.

AUX input

- Press **[AUX]** key to select AUX mode.
- Connect MP19 to PC, MP3/MP4 player, smart mobile phones etc. with the audio cable.
- Play the connected device and adjust the volume to a desired level

Operational guide

Micro SD card mode

- Press **[SD]** key to access Micro SD card mode.
- Insert the micro SD card (not included, Max. 32GB, MP3 format) into the slot.
- Play the music of the micro SD card, and adjust the volume to a desired level.

Play the music

- Press **[SD]** key to access micro SD card mode.
- Insert the micro SD card (not included, Max. 32GB, MP3 format) into the slot.
- Play the music of the micro SD card, and adjust the volume to a desired level.

How to use the keys

Play the selected track: Press numeric keys
Previous / next track: Press **[0]/[10]** keys once
Previous / next folder: Press and hold **[0]/[10]** for approximately 2 seconds
Single cycle: Press **[SD]** key
Play/pause: Press **[P]**

Operational guide

USB card reader mode

- Connect the speaker to PC with the micro USB connecting cable.
- Press **[USB]** key to set the system into USB card reader mode, then you can read and write for the micro SD card.

Specifications

Power output: RMS 2W×2
Signal to noise ratio: >= 85dB
Frequency response: 200Hz–20kHz (±5dB)
Input sensitivity: 600 ± 50mV
Input type: AUX/SD card /FM
Speaker units: 1 1/4inch (48mm)

Manual Edition 1.1, Dec. 2014
IB-200-M00190-03

Edifier International Ltd.,
Suite 1610
16th Floor, Tower II,
Lippo Centre,
89 Queensway
Hong Kong

Tel: +852 2522 6989
Fax: +852 2522 1989
www.edifier-international.com
© 2014 Edifier International Limited. All rights reserved.
Printed in China

NOTICE:
Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. If any difference is found, the actual product prevails.

Troubleshooting

- Please check if power is connected, and if the wall outlet is switched on.
- Please Switch the system off then on and reconnect to the audio source.
- Please check if the system is in STBY.
- Please check if the master volume is turned to minimum.
- Please check if the audio input cable is connected correctly.
- Please check if there is signal from audio source.

If you have any further questions or concerns regarding EDIFIER Products...

Asia, Europe, Oceania:
Please visit our website at: www.edifier-international.com or email EDIFIER Support for further assistance at: enquiry@edifier.com
→ Dear Customer, thank you for purchasing this EDIFIER product.

For the EDIFIER warranty applicable for this product, we refer you to the EDIFIER website www.edifier-international.com/warranty-terms.

Canada/USA/Mexico: www.edifier.ca, Email: service@edifier.ca
If you prefer, you may contact us by phone, Toll Free: 1-877-EDIFIER (334-3437) in Canada, 1-800-688-7406 in US.

South America: Please visit www.edifier.com (English) or www.edifierla.com (Spanish/Portuguese) for detailed local contact information.

Consignes de securite importantes

AVERTISSEMENT: Afin de diminuer les risques d'incendies ou de chocs electriques, ne pas exposer cet appareil a la pluie ou a l'humidite.


- Conservier ces notes.
- Suivre toutes les instructions.
- Ne pas utiliser cet appareil a proximite d'eau.
- Ne nettoyer qu'avec un chiffon doux.
- Ne pas installer pres de sources de chaleur tels des radiateurs, de bouches d'air chaud, des fours, ou autres appareils (y compris des amplificateurs) generant de la chaleur.
- Utiliser que les fixations/accessoires stipules par le fabricant.
- Confier la reparation a un personnel technique agre. La reparation est necessaire lors de tout endommagement de l'appareil, tel les delgats au cordon d'alimentation ou a la prise, un liquide a ete verse ou des objets sont tombes sur l'appareil, ce dernier a ete expose a la pluie ou l'humidite, ne fonctionne pas normalement ou est tombe.
- Lors de l'utilisation d'une prise au RESEAU ELECTRIQUE ou d'un coupleur comme dispositif de deconnexion, ce dernier sera maintenu operationnel.

Utiliser qu'avec le panier, le support, le trepied, le crochet ou la table stipules par le fabricant ou vendus avec l'appareil. Faire attention lors du deplacement d'un panier/appareil combine afin d'eviter des blessures en cas de renversement si un panier est utilise.

Elimination correcte de ce produit. Ce symbole avise qu'en Europe, ce produit ne doit pas etre elimine avec les autres dechets menagers. Recyclez-le de maniere responsable pour promouvoir la reutilisation durable des ressources materielles et eviter tout risque pour l'environnement ou la sante resultant d'une elimination non controlee des dechets. Pour retourner le produit usage, utilisez les points de retour et de collecte ou contactez le vendeur du produit qui peut prendre en charge ce produit pour un recyclage respectueux de l'environnement.


Déballage

Contenu du produit

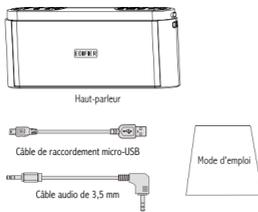

Haut-parleur
Câble de raccordement micro-USB
Câble audio de 3,5 mm
Mode d'emploi

Instructions de charge

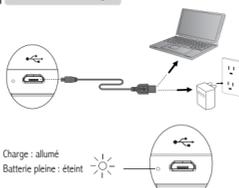


Charge : allumé
Batterie pleine : éteint


- Branchez l'enceinte sur une source d'alimentation par USB sur un ordinateur ou un adaptateur CA USB avec le câble ble USB fourni pour la charge.
- Chargez l'enceinte 6 à 8 heures avant la première utilisation.
- Fermez l'enceinte quand vous ne l'utilisez pas.

Remarque:
Afin d'assurer une pleine charge et une lecture audio optimale, chargez l'EDIFIER MP19 une fois par mois.

Illustrations



- Pavé numérique (0 à 9) : Mémoire/sélectionner des stations FM préréglées (mode FM) ; Lire la musique préprogrammée (mode SD)
- Sélection de la source audio : FM—AUX—SD—USB
- Lecture/pause/maintenir enfoncé pour afficher la jauge de batterie.
- Réglage du volume
- Un seul cycle (mode carte micro SD)
- Piste/dossier précédent/suivant (mode carte micro SD)



- Marche/arrêt
- Trou de dragonne
- Témoin de charge
- Port du connecteur mini-USB
- Prise casque
- Prise d'entrée AUX
- Prise de connexion de carte Micro SD

Guide d'utilisation

Mode FM

Pour passer en radio FM :	Appuyez sur la touche [FM]
Pour rechercher et mémoriser automatiquement des stations de radio :	Maintenez la touche [FM] enfoncée
Pour changer de station préprogrammée :	Appuyez sur [0]/[10]
Pour régler manuellement des stations de radio :	Par exemple, pour mémoriser FM102.3 à l'emplacement n° 45) Maintenez la touche [0]/[10] enfoncée pour passer en mode SYNTONISATION Appuyez sur la touche [0]/[10] pour régler la fréquence 102.3. Appuyez sur la touche numéro 4, puis maintenez la touche numéro 5 enfoncée jusqu'à ce que le numéro clignote pour terminer le réglage.

Entrée AUX

- Press **[AUX]** key to select AUX mode.
- Connect the MP19 to PC, MP3/MP4 player, smart mobile phones, etc. with the audio cable.
- Use the connected device and adjust the volume to a desired level.

Guide d'utilisation

Mode carte micro SD

- Press **[SD]** key to access Micro SD card mode.
- Insert the micro SD card (not included, max. 32 GB, MP3 format) into the slot.
- Play the music of the micro SD card and adjust the volume to your preference.

Lecture de musique

- Appuyez sur la touche **[SD]** pour accéder au mode de carte Micro SD.
- Insérez la carte micro SD (non incluse, max. 32 Go, format MP3) dans la fente.
- Lisez la musique sur la carte micro SD et réglez le volume à votre convenance.

Utilisation des touches

Pour lire la piste sélectionnée : Appuyez sur les touches numériques.
Piste précédente/suivante : Appuyez une fois sur les touches **[0]/[10]**.
Dossier précédent/suivant : Maintenez enfoncé **[0]/[10]** environ 2 secondes.
Un seul cycle : Appuyez sur la touche **[SD]**.
Lecture/pause : Appuyez sur **[P]**.

Guide d'utilisation

Lecteur de carte USB

- Branchez l'enceinte au PC grâce au câble de raccordement micro-USB.
- Appuyez sur la touche **[USB]** pour régler le système en mode lecteur USB, puis vous pouvez lire la carte micro SD et écrire dessus.

Spécifications

Puissance de sortie : RMS 2 W×2
Rapport signal/bruit : >= 85 dB
Réponse en fréquence : 200 Hz à 20 kHz (±5 dB)
Préatténuation : 600 ± 50 mV
Type d'entrée : AUX/carte SD/FM
Encintes : 48 mm (1 1/4 pouce)

Dépannage

- Veuillez vérifier que l'alimentation soit branchée, et que la prise murale soit allumée.
- Veuillez éteindre le système puis le rallumer et le rebrancher à la source audio.
- Veuillez vérifier si le volume est baissé au minimum.
- Veuillez vérifier sur l'amplificateur est toujours en mode STBY.
- Veuillez vérifier que le câble d'entrée audio soit correctement branché.
- Veuillez vérifier que la source audio ait un signal.

Si vous avez d'autres questions ou problèmes concernant les produits d'EDIFIER...

Asia, Europe, Océanie:
Visitez notre site web: www.edifier.com ou écrivez au service d'assistance d'EDIFIER à l'adresse: main@edifier.com
→ Cher client, merci d'avoir acheté ce produit d'EDIFIER. Pour la garantie d'EDIFIER applicable à ce produit, nous vous invitons à visiter le site web d'EDIFIER www.edifier-international.com/warranty-terms.

Canada/USA/Mexique: www.edifier.ca, Email: service@edifier.ca
Vous pouvez également nous appeler sans frais au : 1-877-EDIFIER (334-3437) au Canada, 1-800-688-7406 aux États-Unis.

Amérique du Sud: Visitez www.edifier.com (anglais) ou www.edifierla.com (espagnol/portugais) pour les coordonnées locales.

EDIFIER 东莞市漫步者科技有限公司			
名 称:	MP19 (英法文) 说明书		
材 质:	80克书纸	版面设计:	
尺 寸:	60×150 (MM)	校 对:	
版本号及料号:	V1. 1/IB-200-M00190-03	批 准:	